

SOLAR LED WALL LIGHT WITH
MOTION SENSOR

LÁMPARA LED SOLAR DE PARED
CON SENSOR DE MOVIMIENTO

US-EN

SOLAR LED WALL LIGHT WITH
MOTION SENSOR

Operating and Safety Instructions

US-ES

LÁMPARA LED SOLAR DE PARED
CON SENSOR DE MOVIMIENTO

Instrucciones de uso y seguridad

IAN 378395_2110

US-EN

US-ES


9

Distributed by LIDL US, LLC,
Arlington, VA 22202

05/2022
Model No.: 718-W
Made in/Hecho en: China



07/2022

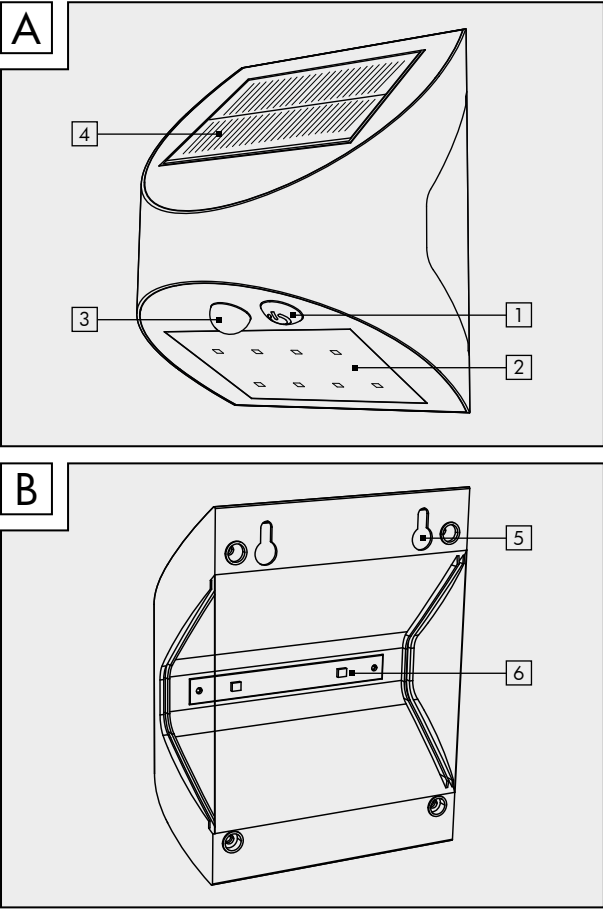

US-EN

Solar LED Wall Light with Motion Sensor

● Introduction

 Congratulations on the purchase of your new product. You have purchased a high quality product. Please read this instruction manual carefully and completely. These instructions are an essential part of the product and contain important information on first-time use and handling. Always comply with any safety instructions. If you have any questions or are unsure how to handle the product, please contact your retailer or customer service center. Please keep this manual for reference, and pass it on to third parties, if applicable.



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B ISM equipment, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experience radio/TV technician for help.

● Key to Illustrations

	Read the instruction manual!
	Issue date of instruction manual (month/year)
	Date of manufacture (month/year)
	Direct current
	Please note warning and safety instructions!
	Danger to life and accident risk for toddlers and children!
	Explosion hazard!
	Wear protective gloves!
	Please dispose of packaging and product in an environmentally friendly manner!
	This symbol means that the product operates with safety extra-low voltage (SELV/PELV) (protection class III).
	For outdoor use – weatherresistant and splashproof (IP65)
	Detection range
	Detection angle
	Max. light output
	Protected against ingress of dust (dust-proof, fully contact-proof) and protected against sprayed water from any direction
	Embalaje de madera controlada con la etiqueta FSC Mixto
	This device complies with part 15 of the FCC Rules.

● Intended Use

The product is intended for automatic illumination in outdoor areas (e.g. garden, patio, etc.). The product is not suitable for household room lighting. This product is only intended for use in private households. Any type of use other than that described above or any modification of the product is prohibited and likely to cause damage or even personal injury. The manufacturer or retailer accepts no liability for loss or damage that occurs as a result of use other than intended or incorrect use.

● Scope of Delivery

1x Solar LED Wall Light with Motion Sensor
1x set fixings (2 wall plugs and 2 screws)
1x instruction manual

● Description of Parts

	ON/OFF button		Solar panel
	Solar LED Wall Light with Motion Sensor		Mounting holes
	Motion detector		LEDs for accentuated illuminatione

● Technical Details

Model number:	718-W
Solar panel:	5,5 V  , 90 mA
Li-Ion battery:	3,7V  , 1200 mAh (non-exchangeable)
Illuminants:	2 x LED (accentuated illumination) 8 x LED (front illumination)
Rating:	3W
Motion detector:	Detection range 6.5 ft – 16.4 ft (2 – 5 m) Angle of coverage: approx. 90°
Degree of protection:	IP65

Dimensions:	approx. 4.1 x 5.1 x 3.1 in (W x H x D) (10,5 x 13 x 8 cm)
Recommended height of installation:	6.5 – 13.1 ft (2 – 4 m)

● Safety Instructions



Safety Instructions



⚠ WARNING!

DANGER TO LIFE AND ACCIDENT RISK FOR TODDLERS AND CHILDREN! Never leave children unattended with packaging material. Hazard of suffocation. Children often underestimate hazards. Please keep children away from the product at any time.

- **DANGER TO LIFE!** Keep children away while assembling the device. Scope of delivery includes a number of screws and other small parts. They can be dangerous to life when swallowed or inhaled.
- This product may be used by children of 14 years and older, and persons with reduced physical, sensory or mental abilities, or persons without relevant experience and knowledge if they are attended, or after they have been properly instructed as to how to use the product safely, and if they have understood any resulting hazards. Children must not play with the product. Cleaning and maintenance works must not be conducted by unattended children.
- Do not use the product if you detected any defects or damage.
- If the lamp has concluded its life span, it must be disposed of in accordance with local waste disposal regulations. LEDs are not exchangeable.



Safety Instructions for batteries/
rechargeable batteries

- **DANGER TO LIFE!** Keep batteries/rechargeable batteries out of the reach of children. If any part has been swallowed, immediately see a doctor!
-  **RISK OF EXPLOSION!** Never try to recharge non-rechargeable batteries. Do not short-circuit batteries/rechargeable batteries or open them up. This may result in overheating, risk of fire, or bursting.
 - Never throw batteries/rechargeable batteries into a fire or water.
 - Do not subject batteries/rechargeable batteries to mechanical stress.

● Risk of batteries/rechargeable batteries
leaking

- Avoid exposing batteries/rechargeable batteries to extreme conditions or temperatures, e.g. on radiators/in direct sunlight.
- Prevent any contact with skin, eyes and mucosa! After any contact with battery acid, rinse affected part of body with sufficient quantities of clear water and immediately see a doctor!
-  **WEAR PROTECTIVE GLOVES!** Leaking or damaged batteries/rechargeable batteries can cause burns if they come into contact with the skin. For this reason, wear protective gloves when handling them.
- In the event of leaking batteries, remove them immediately from the product in order to prevent damage.

● Assembly

Note: take the product out of its packaging and remove all packing material.

- Check that all package contents are present.
- Check if the product or individual parts are damaged. Should you detect damage, do not use the product. Please contact the retailer via the service address indicated.



Please make sure that no cables, gas pipes or water pipes are located where you wish to drill holes in the wall. Use a power drill in order to drill holes in the wall. Please note the safety instructions in the instruction manual of your power drill. Otherwise there is a risk of death or injuries due to electric shock.

When selecting the place of installation, please pay attention to the following things:

- Make sure the product illuminates the selected area properly.
- Make sure the motion detector  (see Fig. A) covers the selected area. The motion sensor has coverage of a maximum of 16.4 ft (5 m) with an angle of coverage of approx. 90°.
- Make sure the motion detector  is not illuminated by street lights during the night. This may result in diminished functionality.
- The solar panel  should be positioned where it will be exposed to as much direct sunlight as possible. Even partial shade during the day can significantly impair the charging process (see Fig. A.).
- Recommended height of installation is 6.5–13.1 ft / 2–4 m. Transfer the positions of the holes at the assembly point to the wall.
- Drill holes (ø 6 mm).
- Screw one plug and one screw each into the drilled holes. Leave a little space between the head of the screw and the wall.
- Mount the product to the wall by putting it with the mounting holes  (see Fig. A and B) onto the screws.
- If necessary, adjust the gap between the screw heads and the mounting surface to provide a firm seating for the Solar LED Wall Light with Motion Sensor .

Cardinal Points: Optimum direction is pointing southward. Rather select a direction more towards the west than towards the east.

● Mode of Function

When exposed to direct sunlight, the solar panel transforms light into electrical energy, and stores it in the incorporated rechargeable battery. When completely recharged, luminous period for accentuated illumination  is 12.5 hours. Spotlight (8 LEDs) is illuminated for 15 seconds after detection of motion. Luminous period is approx. 1 hour if all LEDs are illuminated. Before first using it, the rechargeable battery must be fully charged (please see chapter „Charging the Rechargeable Battery“).

● Charging the Rechargeable Battery

- Switch off the product, if applicable, by pressing the ON/OFF button  in order to prevent impairment of charging process through switching on of product.

Note: After 4 to 6 days with proper sunshine, rechargeable battery is fully charged.
- Duration of charging process depends on charging status of rechargeable battery as well as sunshine quality.

● Commissioning

- Press the ON/OFF button  (see Fig. A), in order to switch on the product. The product turns on when the ambient light is < 30 lx.
- Press the ON/OFF button  again in order to switch off the product.

● Cleaning and Storage

- Press the ON/OFF button  in order to switch off the product if you do not wish to use the product, or if you want to store it.
- Please check the motion detector  and solar panel  regularly for dirt. Remove any dirt to ensure proper functioning of product.
- Keep the product, and in particular the solar panel , free from snow and ice during winter.
- Clean the product with a lintless, slightly wet cloth and mild detergent.

● Troubleshooting

- = Errors
- = Cause
- = Solution
- = The product cannot be switched on.
- = The product is switched off.
- = Press the ON/OFF button , in order to switch on the product.
- = The motion detector  is dirty.
- = Clean the motion detector.
- = The rechargeable battery is empty.
- = Recharge the rechargeable battery (please see chapter „Charging of Rechargeable Battery“).
- = Light is flashing.
- = Rechargeable battery is almost empty.
- = Recharge the rechargeable battery (please see chapter „Charging of Rechargeable Battery“).
- = Rechargeable battery is empty within a very short period of time.
- = Solar panel  is dirty.
- = Clean the solar panel.

● Disposal



Please inquire about disposal options of your old product at your municipality or town administration.If your product is old and obsolete, in the interest of environment, do not dispose of it via your household waste system, but through specialist waste disposal systems. Information on collecting points and opening hours is available at your competent administrative bodies.

Environmental hazards through wrong disposal of rechargeable batteries! Rechargeable batteries must not be disposed of via household waste systems. They may contain poisonous heavy metals, and are subject to special waste treatment. Batteries and rechargeable batteries that are not permanently installed in the device must be removed and disposed of separately before disposing of the product. Please only dispose of batteries and rechargeable batteries when they are discharged! If possible, use rechargeable batteries instead of disposable batteries.
) marked with: Cd = cadmium; Hg = quicksilver; Pb = lead

● 3 year limited warranty

What does this warranty cover?

The warranty covers:

- Damage, breakage or inoperability due to defect.
- Damage not caused by normal wear and tear or failure to follow the safety and maintenance instructions provided in the user manual.

What is not covered by the warranty?

The warranty does not cover damage caused by:

- Normal wear and tear of the product, including fragile parts (such as switches, glass, etc.);
- Improper use or transport;
- Disregarding safety and maintenance instructions;
- Accidents or acts of nature (e.g. lightning, fire, water, etc.);
- Tampering with the product (such as removing cover, unscrewing screws etc.)

Consequential and incidental damages are also not covered under this warranty. However, some states do not allow the exclusion or limitation of incidental or consequential damages, so this limitation or exclusion may not apply to you.

What is the period of coverage and warranty resolution?

The warranty is for 3 years from the date of purchase. At our discretion, product will either be refunded or replaced.

What will we not do?

We will not:

- Start a new warranty period upon product exchange;
- Repair product.

How to process the warranty?

To initiate, please:

- Call customer service at 1 (844) 543-5872
- Visit the Website Customer Service Platform at www.lidl.com/contact-us or
- Visit a LIDL store for further assistance

To ensure the quickest warranty return process, please have the following available:

- The original sales receipt that includes the date purchased;
- The product and manual in the original package;
- A statement of the problem.

What must you do to keep the warranty in effect?

- Retain the original receipt;
- Follow all product instructions;
- Do not repair or modify the product.

How does state law relate to this warranty?

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. All implied warranties are limited by the duration and terms of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

● Service

US-EN

Hotline: 1 (844) 543-5872
(www.lidl.com/contact-us)

IAN 378395_2110

Please have the receipt and the article number (e.g. IAN 123456) ready as proof of purchase for all enquiries. You can find an up-to-date version of the operating instructions at: www.citygate24.de

