



BATTERY-OPERATED LED WALL LIGHT

Operating and safety information

AKUMULATORINIS SIENINIS LED ŠVIESTUVAS

Valdymo ir saugos nurodymai

AKUGA LED-SEINALAMP

Kaistisus ir ohtusjuhisied

AR AKUMULATORI DARBINAMA LED SIENAS LAMPA

Lietosanas un drošības norādījumi

AKKU-LED-WANDLEUCHE

Bedienungs- und Sicherheitshinweise



Read the operating instructions!

Issue date of instruction manual (month/year)

Date of manufacture (month/year)

Risk of fatal injury and accidents for infants and children!

Observe warning notices and safety instructions!

Explosion hazard!

Wear protective gloves!

This symbol indicates that the product operates with safety extra-low voltage (SELV/PELV, protection class III).

Not suitable for indoor lighting

Suitable for indoor use only

Luminous flux

Universal Serial Bus (USB)

The LEDs are not replaceable.

Dispose of packaging and product in an environmentally friendly manner!

Risk of environmental damage from incorrect disposal of batteries/rechargeable batteries!

Packaging made of FSC certified wood mix

With the CE label, the manufacturer confirms that this product complies with the applicable European directives.

Intended use

This battery-powered LED wall light is highly user-friendly in design and easy to use. It allows you to illuminate poorly lit areas, especially in places where there is no direct mains power supply. The light must not be operated while it is charging. This product should only be used as explained in these instructions. Any other use is considered use other than intended and may cause property damage or personal injury. This product is not intended for commercial or industrial use. For use in indoor areas only. Not suitable for room lighting.

Included in package

1x battery-powered LED wall light
1x ball-joint mount
1x adhesive pad
1x USB charging cable
1x instruction manual

Description of parts

1 Battery-powered LED wall light
2 LEDs
3 Ball-joint mount
4 Adhesive pad
5 USB charging cable

6 Micro-USB input socket
7 Charge indicator
8 Magnet
9 Touch sensor

Technical data

Model number: 1214-W, 1214-B
Lion battery: 3.7V 1500 mAh (non-replaceable)
max. 2.3 W
Charging time: approx. 3–4 h
Illumination time: approx. 2–12 h depending on mode and brightness

Colour temperature: Warm white (2700 K), neutral white (4000 K), cold white (5700 K)
USB socket input voltage: 5V max. 1 A, max. 5 W

Dimensions: approx. 4 x 7.5 x 8.9 cm (incl. mount)
Protection class: III
Luminous power: approx. 150 lm

Safety instructions

Safety instructions

WARNING!
RISK OF FATAL INJURY AND ACCIDENTS TO INFANTS AND CHILDREN! Never leave children unsupervised with the packaging material. There is a danger of suffocation from the packaging material. Children often underestimate the dangers. Always keep children away from the battery-powered LED wall light.

This product can be used by children aged 8 years and over, as well as by persons with limited physical, sensory or mental abilities or lacking in experience and knowledge, if they are supervised or have been instructed on the safe use of the product and understand the resulting hazards. Do not let children play with the product. Cleaning and maintenance may not be carried out by children without proper supervision.

Do not use the product if you notice any defects.
Once the lamp has reached its end of life, it must be disposed of in accordance with local disposal regulations. The LEDs are not replaceable.

Avoid the risk of fire and injury

Never look at the illuminant up-close when the light is switched on.
Never look at the illuminant through optical instruments.
Never cover the light or the mains adapter with towels, curtains or other objects; always keep them a safe distance from other highly combustible materials. Maintain adequate ventilation and space surrounding the light. Excessive heat build-up can cause a fire.

Do not operate the product near heat sources such as radiators and other heat-emitting devices!
Never throw the product into fire or expose it to high temperatures.
Avoid positioning the USB connection cable in a way that will make it a tripping hazard.

Proper conduct

Mount the light in a location where it is protected from dirt and excessive heat.
Pay attention to all times! Always be aware of what you are doing and act sensibly. Never use the light if you are not focussed or feel unwell.

Before using the product, familiarise yourself with all of the instructions and illustrations in this instruction manual, and with the product itself.

Safety instructions for batteries / rechargeable batteries

RISK OF DEATH! Keep batteries / rechargeable batteries out of the reach of children. If swallowed, seek medical advice immediately!
PLEASE NOTE! The rechargeable battery is not replaceable. When it is worn out, the entire light must be replaced.

EXPLOSION HAZARD! Never recharge non-rechargeable batteries. Do not short-circuit and/or open up batteries / rechargeable batteries. They could overheat, cause a fire or explode.
If rechargeable batteries are used incorrectly, there is a risk of explosion or skin burns from leaking battery fluid.
Never throw rechargeable batteries into fire. They may explode or release toxic fumes.
Never dismantle or short-circuit rechargeable batteries.
Charge the battery at normal room temperature (approx. 20 °C). Only use a SELV mains adapter for charging!
Remove the batteries from the battery compartment as soon as they are empty or if you do not intend to use the product for an extended period of time.

Never combine different types of rechargeable batteries or batteries with different charge levels.

Risk of batteries / rechargeable batteries leaking

Avoid exposing batteries / rechargeable batteries to extreme conditions and temperatures, e.g. on radiators or in direct sunlight.
Avoid contact with skin, eyes and mucous membranes! In the event of skin contact with battery acid, immediately rinse the affected area with plenty of clean water and seek urgent medical advice!

WEAR PROTECTIVE GLOVES! Leaking or damaged batteries / rechargeable batteries can cause chemical burns if they come into contact with skin. Please wear suitable protective gloves.
In the event that a battery leaks, remove it from the product immediately to avoid damage.

Before first-time use

Please note: Remove the product from its packaging and remove all packing material.

Check that all package contents are present.
Inspect the light [1] and the USB charging cable [3] for any signs of external damage. Do no use the product if you detect any damage. Please contact the retailer via the service address indicated.

Keep the packaging in a safe place out of the reach of children. Allowing children to play with packaging material creates a risk of suffocation!

Assembly and installation

Please note: Remove all packaging material.

Take the ball-joint mount [2] and the adhesive pad [4], then stick the adhesive pad [4] to the base of the mount [2] and tear off the protective strip (see fig. C).

Now stick the mount to the wall in the desired position. To ensure strong adhesion, make sure the surface is flat, dry and free from grease.

For a strong hold, first wait 24 hours and then fix the light [1] to the mount [2] with the aid of the magnet [8] integrated into the housing (see fig. B).

Please note: Removing the adhesive pad may cause damage to the surface it is stuck onto. We can accept no liability for such damage! When the battery needs to be recharged, the product can simply be removed from the mount [2] (see fig. B).

Charging the battery

RISK OF ELECTRIC SHOCK!
The light [1] should only be charged in dry indoor areas using a SELV mains adapter. Fully charge the battery before using the light [1] for the first time. To do so, use the USB charging cable provided [5] (see fig. A).

Insert the USB charging cable [5] into the micro-USB socket [4] on the light.

To charge the lamp, connect the USB charging cable [5] to a USB mains adapter (5 V max. 1 A).

Plug the USB mains adapter into a power outlet.
The charging time is approx. 3–4 hours. The charge indicator [7] remains red until the light [1] is fully charged. As soon as the light [1] is fully charged, the charge indicator [7] turns green. You can then unplug the USB mains adapter from the power outlet and disconnect the USB charging cable [5] from the light [1].

Switching the light ON/OFF

The touch sensor [9] can be used to switch the product on/off and adjust the settings of the light.

To switch the light on, press and hold the touch sensor [9] for approx. 2 seconds.

Tap the touch sensor [9] to adjust the brightness. There are three brightness levels to choose from (20%, 50%, 100%).

To change the colour temperature, press and hold the touch sensor [9] for approx. 2 seconds.

The light [1] has three different colour temperatures: warm white, neutral white and cold white.

Maximum illumination time when fully charged and on the lowest brightness setting: approx. 12 h.

Maximum illumination time when fully charged and on the highest brightness setting: approx. 2 h.

To switch the light [1] off, tap the touch sensor [9] multiple times.

Cleaning and storage

If you wish to stop using the product and store it away, switch it off by tapping the touch sensor [9].

Regularly inspect the product for soiling. Remove any dirt to ensure proper function of the product.

Use only a dry, lint-free cloth for cleaning. If the product is very dirty, dampen the cloth slightly.

When the product is not in use, store it inside the packaging in a dry place.

Troubleshooting

● = Fault
● = Cause
○ = Solution

The product is not lighting up.
The battery needs to be charged.
Charge the light via the micro-USB socket using the USB charging cable provided. The charging time is approx. 3–4 hours.

The charge indicator is not lighting up while the lamp is charging.
There is no power supply to the light.
Please ensure that your mains adapter and the USB charging cable are properly connected.

Disposal

Note the labels on the packaging materials when sorting the waste by the following meanings:

1-7: Plastics
20-22: Paper and cardboard
80-98: Composite materials

You can find out how to dispose of the used product by contacting your local district or city council.

In the interest of environmental protection, when the product has reached the end of its useful life, do not dispose of it as general household waste but have it properly recycled. For information on recycling centres and their opening times, please contact your local council.

Faulty or used batteries must be recycled in accordance with Directive 2006/66/EC and amended. Return batteries and/or the product to the local recycling facilities provided.

Risk of environmental damage from incorrect disposal of rechargeable batteries!
Batteries must not be disposed of as general household waste.

They may contain toxic heavy metals* and are subject to special waste treatment. Batteries and rechargeable batteries that are not permanently fixed inside the product must be removed before disposal of the product and disposed of separately. Please ensure batteries/rechargeable batteries are fully discharged when disposed of! Wherever possible, use rechargeable batteries rather than single-use batteries.

* Marked as followed: Cd = cadmium, Hg = mercury, Pb = lead

Warranty

Dear customer, this product comes with a 3-year warranty from the date of purchase. In the event that this product is faulty, you have legal rights against the seller or the producer. These statutory rights are not restricted by our warranty as set out below.

Warranty terms
The warranty period begins with the date of purchase. Please keep the original receipt in a safe place. It is required as proof of purchase. If a material or manufacturing defect occurs within three years of the date of purchase, we will repair or replace the product for you free of charge, or refund the purchase price, at our discretion. This warranty service is granted provided that the faulty device and the proof of purchase (receipt) are presented within three years, along with a brief written description of the fault and of when it occurred. If the fault is covered by our warranty, we will return the fixed product or send you a new one. No new warranty period shall begin upon repair or replacement of the product.

Warranty period and statutory warranty claims
The warranty period is not renewed after a warranty service has been granted. This rule shall also apply for any replaced or repaired parts. Any damage or faults that already existed when buying the product must be reported immediately upon unpacking the product. A fee is charged for any repairs that are carried out after the end of the warranty period.

Warranty scope
The device was carefully manufactured according to the strictest quality guidelines and thoroughly tested before delivery. The warranty applies to material or manufacturing defects. This warranty does not apply to product parts that are subject to normal wear and tear and can therefore be regarded as wearing parts, or damage to fragile parts, such as switches, rechargeable batteries or parts that are made of glass. This warranty is void if the product has been damaged, improperly used or serviced. To ensure proper use, all instructions included in the manual

must be followed carefully. All uses and actions that users are discouraged from or warned of in the manual must be avoided under all circumstances. The product is intended for private household use only, and not for commercial activities. The warranty is void, if the product is treated inappropriately, if force is applied, and in the case of any manipulation that is not carried out by our authorised service branch.

Warranty processing

To ensure your request is handled swiftly, please observe the following **Notes:**

Please have the receipt and the article number (e.g. IAN 123456) ready as proof of purchase for all enquiries.

Please refer to the type plate on the product, an engraving on the product, the cover of the manual (bottom left) or the sticker on the back or base of the product to find out the product number.

In the case of any malfunctions or other defects, please call or email the service department indicated below as a first step.

After your product has been registered as faulty, you can send it to the specified service address, free of charge. Please include the proof of purchase (receipt) and information about the defect and about when it occurred.

Service

Service Great Britain
Tel.: 00800 80040044
E-Mail: administration@mynetsend.de

IAN 456080_2304

Please have the receipt and the article number (e.g. IAN 123456) ready as proof of purchase for all enquiries.

You can download this and many other manuals, product videos and installation software at www.lidl-service.com.

Scanning the QR code on the front page will take you directly to the Lidl Service web page (www.lidl-service.com) where you can access the user instructions by entering the item number (IAN) 123456_7890.

Service

Please have the receipt and the article number (e.g. IAN 123456) ready as proof of purchase for all enquiries.

You can download this and many other manuals, product videos and installation software at www.lidl-service.com.

Scanning the QR code on the front page will take you directly to the Lidl Service web page (www.lidl-service.com) where you can access the user instructions by entering the item number (IAN) 123456_7890.

Service

Please have the receipt and the article number (e.g. IAN 123456) ready as proof of purchase for all enquiries.

You can download this and many other manuals, product videos and installation software at www.lidl-service.com.

Scanning the QR code on the front page will take you directly to the Lidl Service web page (www.lidl-service.com) where you can access the user instructions by entering the item number (IAN) 123456_7890.

Service

Please have the receipt and the article number (e.g. IAN 123456) ready as proof of purchase for all enquiries.

You can download this and many other manuals, product videos and installation software at www.lidl-service.com.

Scanning the QR code on the front page will take you directly to the Lidl Service web page (www.lidl-service.com) where you can access the user instructions by entering the item number (IAN) 123456_7890.

Service

Please have the receipt and the article number (e.g. IAN 123456) ready as proof of purchase for all enquiries.

You can download this and many other manuals, product videos and installation software at www.lidl-service.com.

Scanning the QR code on the front page will take you directly to the Lidl Service web page (www.lidl-service.com) where you can access the user instructions by entering the item number (IAN) 123456_7890.

Service

Please have the receipt and the article number (e.g. IAN 123456) ready as proof of purchase for all enquiries.

You can download this and many other manuals, product videos and installation software at www.lidl-service.com.

Scanning the QR code on the front page will take you directly to the Lidl Service web page (www.lidl-service.com) where you can access the user instructions by entering the item number (IAN) 123456_7890.

Service

Please have the receipt and the article number (e.g. IAN 123456) ready as proof of purchase for all enquiries.

You can download this and many other manuals, product videos and installation software at www.lidl-service.com.

Scanning the QR code on the front page will take you directly to the Lidl Service web page (www.lidl-service.com) where you can access the user instructions by entering the item number (IAN) 123456_7890.

Service

Please have the receipt and the article number (e.g. IAN 123456) ready as proof of purchase for all enquiries.

You can download this and many other manuals, product videos and installation software at www.lidl-service.com.

Scanning the QR code on the front page will take you directly to the Lidl Service web page (www.lidl-service.com) where you can access the user instructions by entering the item number (IAN) 123456_7890.

Service

Please have the receipt and the article number (e.g. IAN 123456) ready as proof of purchase for all enquiries.

You can download this and many other manuals, product videos and installation software at www.lidl-service.com.

Scanning the QR code on the front page will take you directly to the Lidl Service web page (www.lidl-service.com) where you can access the user instructions by entering the item number (IAN) 123456_7890.

Service

Please have the receipt and the article number (e.g. IAN 123456) ready as proof of purchase for all enquiries.

You can download this and many other manuals, product videos and installation software at www.lidl-service.com.

Scanning the QR code on the front page will take you directly to the Lidl Service web page (www.lidl-service.com) where you can access the user instructions by entering the item number (IAN) 123456_7890.

Service

Please have the receipt and the article number (e.g. IAN 123456) ready as proof of purchase for all enquiries.

You can download this and many other manuals, product videos and installation software at www.lidl-service.com.

Scanning the QR code on the front page will take you directly to the Lidl Service web page (www.lidl-service.com) where you can access the user instructions by entering the item number (IAN) 123456_7890.

Service

Please have the receipt and the article number (e.g. IAN 123456) ready as proof of purchase for all enquiries.

You can download this and many other manuals, product videos and installation software at www.lidl-service.com.

Scanning the QR code on the front page will take you directly to the Lidl Service web page (www.lidl-service.com) where you can access the user instructions by entering the item number (IAN) 123456_7890.

Service

must be followed carefully. All uses and actions that users are discouraged from or warned of in the manual must be avoided under all circumstances. The product is intended for private household use only, and not for commercial activities. The warranty is void, if the product is treated inappropriately, if force is applied, and in the case of any manipulation that is not carried out by our authorised service branch.

Warranty processing

To ensure your request is handled swiftly, please observe the following **Notes:**

Please have the receipt and the article number (e.g. IAN 123456) ready as proof of purchase for all enquiries.

Please refer to the type plate on the product, an engraving on the product, the cover of the manual (bottom left) or the sticker on the back or base of the product to find out the product number.

In the case of any malfunctions or other defects, please call or email the service department indicated below as a first step.

After your product has been registered as faulty, you can send it to the specified service address, free of charge. Please include the proof of purchase (receipt) and information about the defect and about when it occurred.

Service

Service Great Britain
Tel.: 00800 80040044
E-Mail: administration@mynetsend.de

IAN 456080_2304

Please have the receipt and the article number (e.g. IAN 123456) ready as proof of purchase for all enquiries.

You can download this and many other manuals, product videos and installation software at www.lidl-service.com.

Scanning the QR code on the front page will take you directly to the Lidl Service web page (www.lidl-service.com) where you can access the user instructions by entering the item number (IAN) 123456_7890.

Service

Please have the receipt and the article number (e.g. IAN 123456) ready as proof of purchase for all enquiries.

You can download this and many other manuals, product videos and installation software at www.lidl-service.com.

Scanning the QR code on the front page will take you directly to the Lidl Service web page (www.lidl-service.com) where you can access the user instructions by entering the item number (IAN) 123456_7890.

Service

Please have the receipt and the article number (e.g. IAN 123456) ready as proof of purchase for all enquiries.

You can download this and many other manuals, product videos and installation software at www.lidl-service.com.

Scanning the QR code on the front page will take you directly to the Lidl Service web page (www.lidl-service.com) where you can access the user instructions by entering the item number (IAN) 123456_7890.

Service

Please have the receipt and the article number (e.g. IAN 123456) ready as proof of purchase for all enquiries.

</

