



SOLAR LED WALL LIGHT WITH MOTION SENSOR / LÁMPARA LED SOLAR DE PARED CON SENSOR DE MOVIMIENTO

US - EN

SOLAR LED WALL LIGHT WITH MOTION SENSOR

Operating and safety information

US - ES

LÁMPARA LED SOLAR DE PARED CON SENSOR DE MOVIMIENTO

Instrucciones de uso y seguridad

IAN 510388_2410

US - EN US - ES





9

Distributed by LIDL US, LLC,
Arlington, VA 22202

04/2025
Model No.: 1247-W
Made in/Hecho en: China



08/2025

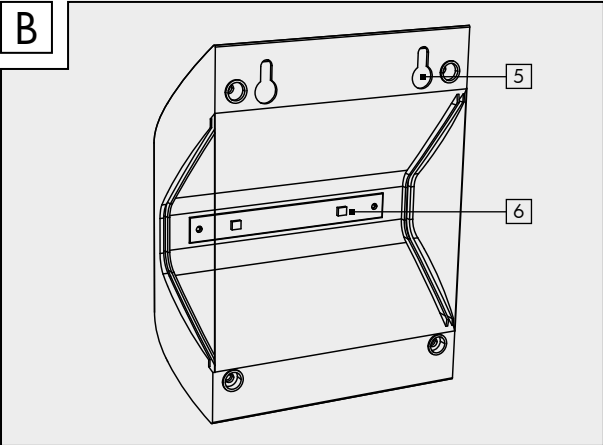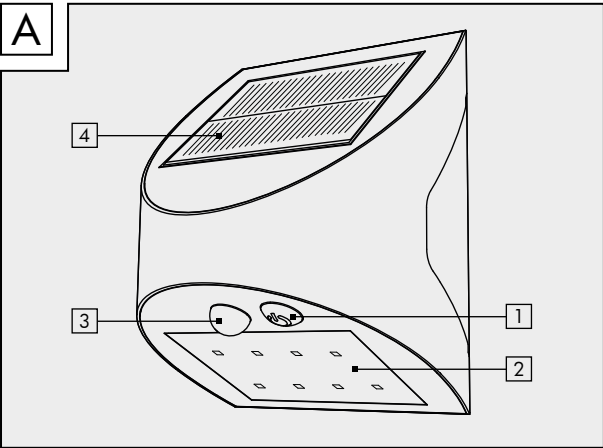

US - EN

Solar LED Wall Light with Motion Sensor

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B ISM equipment, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experience radio/TV technician for help.

● Introduction

Congratulations on the purchase of your new product. You have chosen a high-quality product. Please read these operating instructions thoroughly and carefully. These instructions are an essential part of the product and contain important information on first-time use and handling. Always observe all safety instructions. If you have any questions or are unsure how to operate the product, please contact your retailer or service centre. Please keep this manual in a safe place and pass it on to third parties where necessary.

● Legend of the symbols used

	Read the operating instructions!
	Issue date of instruction manual (month/year)
	Date of manufacture (month/year)
	Direct current
	Observe warning and safety instructions!
	Danger of death and accidents for infants and children!
	Explosion hazard!
	Wear protective gloves!
	Dispose of packaging and product in an environmentally friendly manner!
	Risk of environmental damage from incorrect disposal of batteries/rechargeable batteries!
	(Protection class III) This symbol means that the product operates with safety extra-low voltage (SELV / PELV).
	Not suitable as indoor lighting
	For outdoor use – weatherresistant and splashproof (IP65)
	Detection range
	Detection angle
	Luminous power
	Protected against ingress of dust (dust-proof, fully contactproof) and jet proofed from any direction.
	Packaging made from FSC-certified recycled wood

● Intended use

The product is intended for automatic illumination in outdoor areas (e.g. garden, patio, etc.). The product is not suitable for general indoor lighting in the home. This product is intended for use in private households only. Any type of use other than that described above or any modification of the product is prohibited and likely to cause damage or even personal injury. The manufacturer or retailer accepts no liability for loss or damage that occurs as a result of use other than intended or incorrect use.

● Included in package

1 x LED Solar Wall Light
1 x set of fixings (2 wall plugs and 2 screws)
1 x user instructions

● Description of parts

- 1 ON/OFF button
- 2 LED Solar Wall Light
- 3 Motion sensor
- 4 Solar panel
- 5 Mounting holes
- 6 LEDs for accent lighting

● Technical specifications

Model number: 1247-W
Solar panel: 5.5 V 90 mA
3.7 V 1200 mAh
Li-ion battery: (only be replaced by trained specialists)
Light source: 2 x (accent lighting)
8 x (front lighting)
Rated input: 3W
Motion detector: Range: max. 5 m
Angle of detection: approx. 90°
Protection rating: IP65 (weatherproof and splash-proof)
Dimensions: approx. W 10.5 cm x H 13 cm x D 8 cm

Recommended installation height: 2–4 m

● Safety information

Safety information



⚠ WARNING!

DANGER OF DEATH AND ACCIDENTS FOR INFANTS AND CHILDREN!

Never leave children unsupervised with the packaging material. There is a danger of suffocation from the packaging material. Children often underestimate the dangers. Always keep children away from the product.

- DANGER OF DEATH!** Keep children away from the work area during assembly. Delivery includes a number of screws and other small parts. These can be fatal if they are swallowed or inhaled.
- This product can be used by children aged 8 years and over, as well as by persons with limited physical, sensory or mental abilities or lacking in experience and knowledge if they have been supervised and instructed as to the safe use of the product and understand the resulting hazards. Do not let children play with the product. Cleaning and maintenance may not be carried out by children without proper supervision.
- Do not use the product if you notice any defects.
- LEDs are not replaceable.

Safety instructions for rechargeable batteries

- RISK OF DEATH!** Keep rechargeable batteries out of the reach of children. If swallowed, seek medical advice immediately!
- EXPLOSION HAZARD!** Never recharge non-rechargeable batteries. Do not short-circuit and/or open up batteries/rechargeable batteries. They could overheat, cause a fire or explode.
- Never throw rechargeable batteries into fire or water.
- Do not expose the rechargeable batteries to mechanical stress.

● Risk of leakage from rechargeable batteries

- Avoid exposing rechargeable batteries to extreme conditions and temperatures, e.g. radiators or direct sunlight.
- Avoid contact with skin, eyes and mucous membranes! In the event of skin contact with battery acid, rinse the affected area immediately with plenty of clean water and seek medical advice immediately!
- WEAR PROTECTIVE GLOVES!** Leaking or damaged rechargeable batteries can cause chemical burns if they come into contact with skin. Therefore, wear suitable protective gloves in such cases.
- In the event that of battery leaks, remove battery from the product immediately to avoid damage.

● Assembly and installation

Please note: Take the product out of its packaging and remove all packing material.

- Check that all package contents are present.
- Check if the product or individual parts are damaged. Should you detect damage, do not use the product. Please contact the retailer via the service address indicated.

Decide prior to mounting where the product is to be mounted. Ensure that you will not come into contact with electricity, gas or water pipes when drilling into the wall. Use a drill to drill the holes into the masonry. Observe all safety instructions provided in the operation and safety manual for your drill. Otherwise there is a risk of death or injury from electric shock.

What to consider when deciding on where to mount the product:

- Ensure the product illuminates the desired area. Make sure that the motion sensor [3] covers the desired area (see Fig. A). The motion sensor has a detection range of max. 5 m and a detection angle of approx. 90°.
- Ensure that the motion sensor [3] is not in a position where street lighting will shine on it at night. This may impair the function.
- The solar panel requires direct sunlight. Even partial shade during the day can significantly impair the charging process.
- The recommended mounting height is 2 to 4 m.
- Drill the holes (ø 6 mm).
- Screw one of the supplied wall plugs and screws into each of the drilled holes. Leave a small gap between the screw head and the wall.
- You can now mount the product by placing the mounting holes [5] over the protruding screws (see Fig. B).
- If necessary, adjust the gap between the screw heads and the mounting to ensure the LED solar wall light [2] sits firmly.

Orientation: The optimum alignment is facing south. An orientation facing slightly to the west is preferable to one slightly to the east.

● Method of operation

When exposed to sunlight, the solar cell converts the light into electrical energy, which it stores in the built-in rechargeable battery. When the battery is fully charged, the lantern will provide accent lighting [6] for 30 hours. The spotlight (8 LEDs) lights up for 15 seconds after detecting motion. The burn time is 1 hour if all LEDs are lit. Before first-time use, the battery has to be charged (see section "Charging the battery"). The accent lighting remains permanently on during the hours of darkness.

● Charging the battery

- To avoid slowing down the charging process when the product is switched on, turn off by pressing the ON/OFF button [1].
Please note: The battery is charged after 4 to 6 days of good sunlight. The duration of the charging process depends on the battery's charge level and the quality of the sunlight.

● First-time operation

- Press the ON/OFF button [1] to switch on the product (see Fig. A). The light will come on as soon as the ambient light is below 30 lx.
- Press the ON/OFF button [1] again to turn off the product.

● Cleaning and storage

- Switch off the product by pressing the ON/OFF button [1] if you wish to stop using it and store it away.
- Regularly inspect the motion sensor [3] and the solar panel [4] to make sure they are not dirty. Remove any dirt to ensure the product works correctly.
- Keep the product and especially the solar panel [4] free of snow and ice in winter.
- Clean the product with a clean, damp cloth and a mild detergent.

● Troubleshooting

- = Fault
- = Cause
- = Solution
- = The light fails to switch on.
- = The product is switched off.
- = Press the ON/OFF button [1] to switch the product on.
- = The motion sensor [3] is dirty.
- = Clean the motion sensor [3].
- = The battery is dead.
- = Charge the battery (see section "Charging the battery").

- = The light is flickering.
- = The battery is almost fully discharged.
- = Charge the battery (see section "Charging the battery").

- = The battery discharges within a short time.
- = The solar panel [5] is dirty.
- = Clean the solar panel [5].

● Disposal



Please inquire about disposal options of your old product at your municipality or town administration. If your product is old and obsolete, in the interest of environment, do not dispose of it via your household waste system, but through specialist waste disposal systems. Information on collecting points and opening hours is available at your competent administrative bodies.

Environmental hazards through wrong disposal of rechargeable batteries! Rechargeable batteries must not be disposed of via household waste systems. They may contain poisonous heavy metals, and are subject to special waste treatment. Batteries and rechargeable batteries that are not permanently installed in the device must be removed and disposed of separately before disposing of the product. Please only dispose of batteries and rechargeable batteries when they are discharged! If possible, use rechargeable batteries instead of disposable batteries.

*) marked with: Cd = cadmium; Hg = quicksilver; Pb = lead

● 3 year limited warranty

What does this warranty cover?

The warranty covers:

- Damage, breakage or inoperability due to defect.
- Damage not caused by normal wear and tear or failure to follow the safety and maintenance instructions provided in the user manual.

What is not covered by the warranty?

The warranty does not cover damage caused by:

- Normal wear and tear of the product, including fragile parts (such as switches, glass, etc.);
- Improper use or transport;
- Disregarding safety and maintenance instructions;
- Accidents or acts of nature (e.g. lightning, fire, water, etc.);
- Tampering with the product (such as removing cover, unscrewing screws etc.)

Consequential and incidental damages are also not covered under this warranty. However, some states do not allow the exclusion or limitation of incidental or consequential damages, so this limitation or exclusion may not apply to you.

What is the period of coverage and warranty resolution?

The warranty is for 3 years from the date of purchase. At our discretion, product will either be refunded or replaced.

What will we not do?

We will not:

- Start a new warranty period upon product exchange;
- Repair product.

How to process the warranty?

To initiate, please:

- Call customer service at 1 (844) 543-5872
- Visit the Website Customer Service Platform at www.lidl.com/contact-us or
- Visit a LIDL store for further assistance

To ensure the quickest warranty return process, please have the following available:

- The original sales receipt that includes the date purchased;
- The product and manual in the original package;
- A statement of the problem.

What must you do to keep the warranty in effect?

- Retain the original receipt;
- Follow all product instructions;
- Do not repair or modify the product.

How does state law relate to this warranty?

- This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. All implied warranties are limited by the duration and terms of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

● Service

US - EN

Holline: 1 (844) 543-5872
(www.lidl.com/contact-us)

IAN 510388_2410

Please have the receipt and the article number (e.g. IAN 123456) ready as proof of purchase for all enquiries. You can find an up-to-date version of the operating instructions at: www.citygate24.de

You can download this and many more manuals, product videos and installation software at **www.lidl-service.com**. Scanning the QR code on the front page will take you directly to the Lidl Service Website (www.lidl-service.com) where you can access your Instruction Manual by entering the item number (IAN) 123456_7890.

