



CAMPING CUTLERY / CAMPINGBESTECK / COUVERTS DE CAMPING

GB IE NI MT

Camping Cutlery

Operating and safety information

DE AT BE CH

Campingbesteck

Bedienungs- und Sicherheitshinweise



FR BE CH

Couverts de Camping

Instructions d'utilisation et consignes de sécurité

IAN 519260_2504

DE

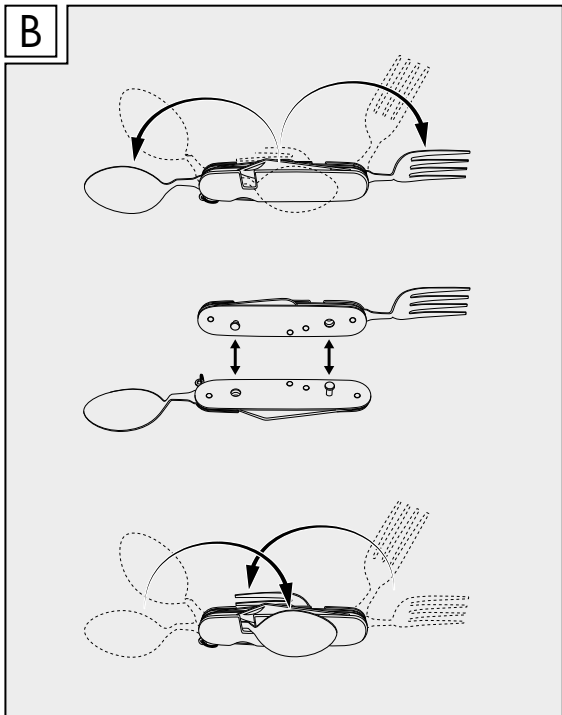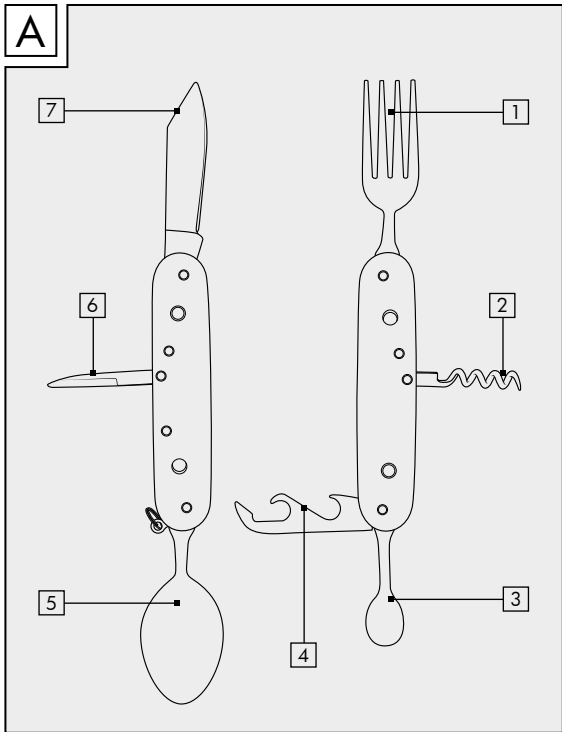

GB IE NI MT

Camping Cutlery

• Introduction



Congratulations on the purchase of your new product. You have chosen a high-quality product. Please read these operating instructions thoroughly and carefully. These instructions are an essential part of the product and contain important information on first-time use and handling. Always observe all safety instructions. If you have any questions or are unsure how to operate the product, please contact your retailer or service centre. Please keep this manual in a safe place and pass it on to third parties where necessary.

• Explanation of symbols



Read the operating instructions!



Issue date of instruction manual (month/year)



Date of manufacture (month/year)



Risk of fatal injury and accidents for infants and children!



Observe warning notices and safety instructions!



This symbol indicates that products are food-safe. This has no effect on flavour or odour characteristics. Quality seal of Warenzeichenverband Edelstahl Rostfrei e.V., which represents high quality requirements and whose members are committed to the quality of materials and workmanship as stipulated by statute. Dispose of packaging and product in an environmentally friendly manner!



Packaging made of FSCcertified wood mix

• Intended use

This product is intended for use in private households only. It is unsuitable for commercial use. This product can be used both indoors and outdoors. The tools are only suitable for menial work and are no substitute for a specialist tool.

• Included in package

- 1x camping cutlery
- 1x belt bag
- 1x user instructions

• Description of parts

- | | | | |
|---|-----------------------|---|-------------|
| 1 | Fork | 5 | Large spoon |
| 2 | Corkscrew | 6 | Spike |
| 3 | Small spoon | 7 | Knife |
| 4 | Can and bottle opener | | |

• Safety instructions



Safety instructions



⚠ WARNING!

RISK OF FATAL INJURY AND ACCIDENTS TO INFANTS AND CHILDREN!

Never leave children unsupervised with the packaging material. There is a danger of suffocation from the packaging material. Children often underestimate the dangers. Always keep children away from the product.

- **Danger of injury!** Never leave children unsupervised with the product. Keep out of reach of children. This product is not a toy.
- The product contains sharp components. Take care not to injure yourself.
- Take special care of your fingers when unfolding and folding the tools. Risk of injury due to crushing.
- Ensure that the tool is fully unfolded before using it.
- Do not unfold or use multiple tools at once.
- Do not use the product if you notice any damage.
- We accept no liability for accidents caused by failure to comply with the above safety instructions or by improper handling.

• Use

In order to split the product for use as cutlery, unfold and separate the two outer cutlery pieces (Fig. B).

• Cleaning and storage

- ☐ When the product is not in use, always store it in a clean, dry condition at room temperature.
- ☐ Only clean using a damp cloth and then wipe dry.
- ☐ **IMPORTANT!** Never clean with aggressive cleaning agents.
- ☐ Not dishwasher-safe.

• Disposal



Note the labels on the packaging materials when sorting the waste; they are marked with abbreviations (a) and numbers (b) with the following meanings:
1-7: Plastics
20-22: Paper and cardboard
80-98: Composite materials



You can find out how to dispose of the used product by contacting your local district or city council.

In the interest of environmental protection, when the product has reached the end of its useful life, do not dispose of it as general

household waste but have it properly recycled. For information on recycling centres and their opening times, please contact your local council.



The product and packaging materials are recyclable. Please dispose of them separately for better treatment of waste. The Triman logo is only applicable to France.



The packaging consists of environmentally friendly material, which can be disposed of at your local recycling centres. The Green Dot does not apply to Germany in this case.

• Warranty

Dear customer, This product comes with a 3-year warranty from the date of purchase. In the event that this product is faulty, you have legal rights against the seller of the product. These statutory rights are not restricted by our warranty as set out below.

Warranty terms

The warranty period begins with the date of purchase. Please keep the original receipt in a safe place. It is required as proof of purchase. If a material or manufacturing defect occurs within three years of the date of purchase, we will repair or replace the product for you free of charge, or refund the purchase price, at our discretion. This warranty service is granted provided that the faulty device and the proof of purchase (receipt) are presented within three years, along with a brief written description of the fault and of when it occurred. If the fault is covered by our warranty, we will return the fixed product or send you a new one. No new warranty period shall begin upon repair or replacement of the product.

Warranty period and statutory warranty claims

The warranty period is not renewed after a warranty service has been granted. This rule shall also apply for any replaced or repaired parts. Any damage or faults that already existed when buying the product must be reported immediately upon unpacking the product. A fee is charged for any repairs that are carried out after the end of the warranty period.

Warranty scope

The device was carefully manufactured according to the strictest quality guidelines and thoroughly tested before delivery. The warranty covers material and manufacturing defects as well as the battery. This warranty does not apply to product parts that are subject to normal wear and tear and can thus be regarded as wearing parts; nor does it cover damage to fragile parts, such as switches or parts made of glass. This warranty is void if the product has been damaged, improperly used or serviced. To ensure proper use, all instructions included in the manual must be followed carefully. All uses and actions that users are discouraged from or warned of in the manual must be avoided under all circumstances. The product is intended for private household use only, and not for commercial activities. The warranty is void, if the product is treated inappropriately, if force is applied, and in the case of any manipulation that is not carried out by our authorised service branch

Warranty processing

To ensure your request is handled swiftly, please observe the following **Notes:**

- ☐ Please have the receipt and the article number (e.g. IAN 123456) ready as proof of purchase for all enquiries.
- ☐ Please refer to the type plate on the product, an engraving on the product, the cover of the manual (bottom left) or the sticker on the back or base of the product to find out the product number.
- ☐ In the case of any malfunctions or other defects, please call or email the service department indicated below as a first step.
- ☐ After your product has been registered as faulty, you can send it to the specified service address, free of charge. Please include the proof of purchase (receipt) and information about the defect and about when it occurred.

• Service

GB

Service Great Britain
Tel.: 00800 80040044
E-Mail: administration@mynetsend.de

IE NI

Service Ireland
Tel. : 00800 80040044
E-Mail: administration@mynetsend.de

MT

Service Malta
Tel. : 00800 80040044
E-Mail: administration@mynetsend.de

IAN 519260_2504

Please have the receipt and the article number (e.g. IAN 123456) ready as proof of purchase for all enquiries. You can find an up-to-date version of the operating instructions at: www.citygate24.de
You can download this and many other manuals, product videos and installation software at **www.lidl-service.com**.
Scanning the QR code on the front page will take you directly to the Lidl Service web page (www.lidl-service.com) where you can access the user instructions by entering the item number (IAN) 123456_7890.

DE AT BE CH

Campingbesteck

• Einleitung



Wir beglückwünschen Sie zum Kauf Ihres neuen Produktes. Sie haben sich damit für ein hochwertiges Produkt entschieden. Bitte lesen Sie diese

Bedienungsanleitung vollständig und sorgfältig durch. Diese Anleitung gehört zu diesem Produkt und enthält wichtige Hinweise zur Inbetriebnahme und Handhabung. Beachten Sie immer alle Sicherheitshinweise. Sollten Sie Fragen haben oder unsicher in Bezug auf die Handhabung des Produktes sein, setzen Sie sich bitte mit Ihrem Händler oder der Servicestelle in Verbindung. Bewahren Sie diese Anleitung bitte sorgfältig auf und geben Sie sie ggf. an Dritte weiter.

• Zeichenerklärung



Bedienungsanleitung lesen!



Ausgabedatum der Bedienungsanleitung (Monat/Jahr)



Herstelldatum (Monat/Jahr)



Lebens- und Unfallgefahr für Kleinkinder und Kinder!



Warn- und Sicherheitshinweise beachten!



Dieses Symbol kennzeichnet Produkte, die lebensmittelecht sind. Dadurch werden Geschmacks- und Geruchseigenschaften nicht beeinträchtigt. Qualitätssiegel des Warenzeichenverbandes Edelstahl Rostfrei e.V., welches für hohe Qualitätsanforderungen steht, dessen Mitglieder sich der satzungsgemäßen Werkstoff- und Verarbeitungsqualität verpflichtet fühlen. Entsorgen Sie Verpackung und Produkt umweltgerecht!



Verpackung aus FSC-zertifiziertem Mix-Holz

• Bestimmungsgemäße Verwendung

Dieses Produkt ist nur für den Einsatz in privaten Haushalten vorgesehen und für gewerbliche Zwecke nicht geeignet. Dieses Produkt kann im Innen- sowie Außenbereich verwendet werden. Die Werkzeuge sind nur für eine untergeordnete Anwendung geeignet und sind kein Ersatz für ein Fachwerkzeug.

• Lieferumfang

- 1x Campingbesteck
- 1x Gürteltasche
- 1x Bedienungsanleitung

• Teilebeschreibung

- | | | | |
|---|-----------------------|---|-------------|
| 1 | Gabel | 5 | Löffel groß |
| 2 | Korkenzieher | 6 | Dorn |
| 3 | Löffel klein | 7 | Messer |
| 4 | Dosen-/Flaschenöffner | | |

• Sicherheitshinweise



Sicherheitshinweise



⚠ WARNING!

LEBENS- UND UNFALLGEFAHR FÜR KLEINKINDER UND KINDER!

Lassen Sie Kinder niemals unbeaufsichtigt mit dem Verpackungsmaterial. Es besteht Erstickungsgefahr durch Verpackungsmaterial. Kinder unterschätzen häufig die Gefahren. Halten Sie Kinder stets vom Produkt fern.

- **Verletzungsgefahr!** Lassen Sie Kinder niemals unbeaufsichtigt mit dem Produkt. Von Kindern fernhalten. Das Produkt ist kein Spielzeug.
- Das Produkt enthält scharfe Komponenten. Achten Sie darauf, sich nicht zu verletzen.
- Achten Sie beim Aus- und Zuklappen besonders auf Ihre Finger. Es besteht Verletzungsgefahr durch Quetschungen.
- Achten Sie darauf, dass das Werkzeug vollständig ausgeklappt wurde, bevor Sie es benutzen.
- Nicht mehrere Werkzeuge gleichzeitig ausklappen oder benutzen.
- Verwenden Sie das Produkt nicht, wenn Sie irgendwelche Beschädigungen feststellen.
- Keine Haftung für Unfälle, die durch Missachtung der o. g. Sicherheitshinweise oder durch unsachgemäße Handhabung entstehen.

• Verwendung

Um das Produkt für die Verwendung zu teilen, klappen Sie die beiden außenliegenden Besteckteile aus und nehmen sie auseinander (Abb. B).

• Reinigung und Lagerung

- ☐ Lagern Sie das Produkt bei Nichtbenutzung immer trocken und sauber bei Raumtemperatur.
- ☐ Nur mit einem feuchten Reinigungstuch reinigen und anschließend trockenwischen.
- ☐ **WICHTIG!** Nie mit scharfen Reinigungsmitteln reinigen.
- ☐ Nicht Spülmaschinen geeignet

• Entsorgung



Beachten Sie die Kennzeichnung der Verpackungsmaterialien bei der Abfalltrennung, diese sind gekennzeichnet mit Abkürzungen (a) und Nummern (b) mit folgender Bedeutung:
1-7: Kunststoffe
20-22: Papier und Pappe
80-98: Verbundstoffe

